

The Nest Healesville Accommodation – TV Remote

Note to play a DVD, press **6** SOURCE and then select DVD. Make sure that the DVD player is on and use the DVD remote control to play, pause and stop the DVD.

1 **POWER:** Turns the TV on and off.

2 **TV:** Selects the TV mode directly.

3 **NUMERIC BUTTONS:** Press to change the channel.

4 **[Enter]:** Performs the same function as the **ENTER [Enter]** key of the directional keys. When switching channels with the numeric buttons, and you press the channel number and then the **ENTER [Enter]** key, the channel is immediately switched.

5 **— [Volume Icon] +:** Press to increase or decrease the volume.

6 **SOURCE:** Press to display and select the available video sources.

7 **CH LIST:** Used to display Channel Lists on the screen.

8 **TOOLS:** Use to quickly select frequently used functions.

9 **INTERNET@:** Press to use various internet services to view useful information and entertaining content. (Australia, Singapore only)

10 **COLOURS BUTTONS:** Use these buttons in the Channel list, Internet@TV, Media play menu, etc.

12 **INFO:** Press to display information on the TV screen.

13 Use these buttons in the Media Play (USB & DLNA) and Anynet+. (●: This remote can be used to control recording on Samsung recorders with the Anynet+ feature)

14 **ON/OFF [Light Icon]:** Pressing the **ON/OFF [Light Icon]** light button toggles between on and off. When the remote control is on, and a key is pressed on the remote control, the remote control buttons will be lit for a moment. (Using the remote control with the **ON/OFF [Light Icon]** light button set to On will reduce the battery usage time.)

15 **PRE-CH:** Enables you to return to the previous channel you were watching.

16 **MUTE:** Press to temporarily cut off the sound.

17 **P ▲/P ▼:** Press to change channels.

18 **MENU:** Displays the main on-screen menu

19 **FAV.CH:** Used to display Favourites Channel Lists on the screen.

20 **RETURN:** Returns to the previous menu

21 **UP ▲ / DOWN ▼ / LEFT ◀ / RIGHT ▶ / ENTER [Enter]:** Use to select on-screen menu items and change menu values.

22 **EXIT:** Press to exit the menu.

23 **CONTENT:** This function enables you to view the **Content Library**. (see page 53)

24 **MEDIA.P:** Allows you to play music files, pictures, and movies.

25 **SUBT.:** Digital subtitle display

26 **GUIDE:** Electronic Programme Guide (EPG) display.

Teletext Functions

2 **[Exit Icon]:** Exit from the teletext display

6 **[List Icon]:** Teletext mode selection (LIST / FLOF)

7 **[Store Icon]:** Teletext store

8 **[Size Icon]:** Teletext size selection

10 **[Topic Icon]:** Fasttext topic selection

11 **[Select Icon]:** Alternately select Teletext, Double, or Mix.

12 **[Reveal Icon]:** Teletext reveal

15 **[Sub Page Icon]:** Teletext sub page

17 **[Next Page Icon]:** Teletext next page

[Prev Page Icon]: Teletext previous page

18 **[Index Icon]:** Teletext index

20 **[Hold Icon]:** Teletext hold

22 **[Cancel Icon]:** Teletext cancel

