


The Nest Healesville Accommodation – Wood Heater

Nectre MKI Wood heater

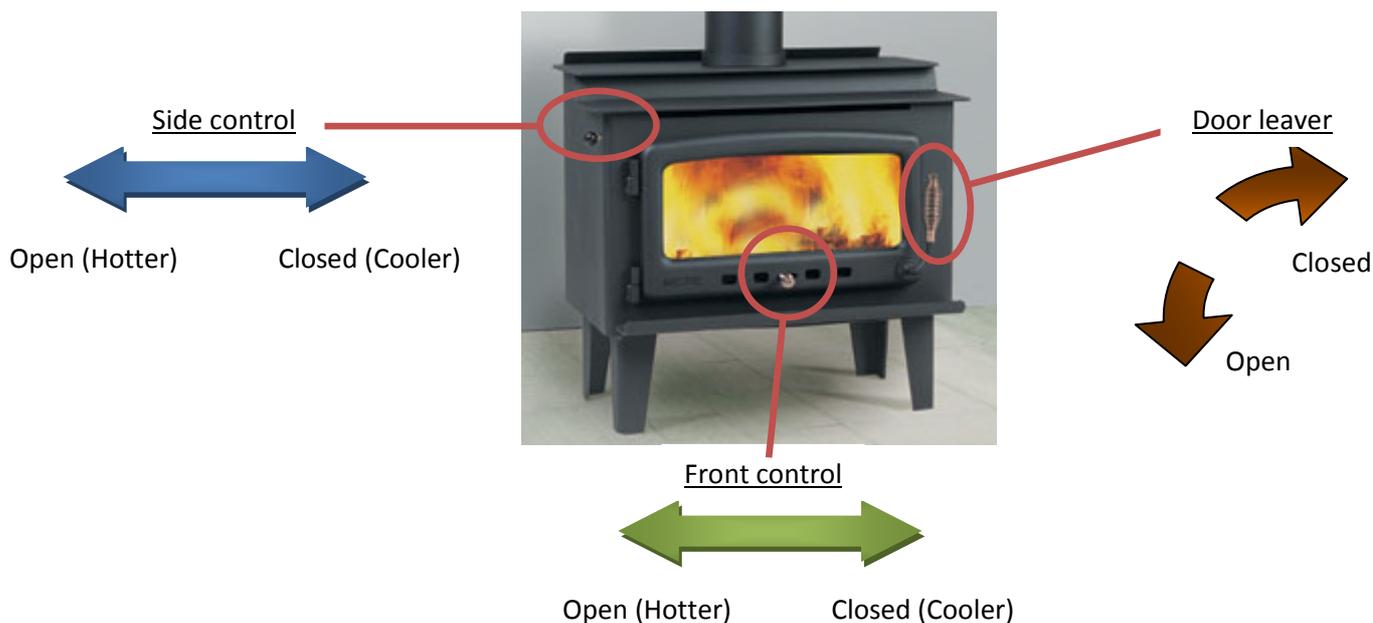

- 1) Open both controls fully.
- 2) Open firebox door and build a small fire using paper or a firelighter and dry kindling. Close the door and wait a few minutes for a good updraft in the flue to establish the fire.
- 3) With the controls still in the fully open position add two or three seasoned logs to your fire. A space above the fire will allow a flame to develop that will burn off the gases released by the wood.
- 4) After about 45 minutes, when your wood has begun to burn strongly, adjust your draft control down to keep the fire at a moderate level.
- 5) Once a bed of coals has been established on the firebrick hearth, you may adjust the draft control to a low setting to operate the unit at its most efficient mode.
- 6) When you go to bed or leave, shut both controls to the full closed position

Burn the fire brightly. Smoke just pollutes the atmosphere and causes build up in the flue.

Some cracking and popping noises may be experienced during the heating up process.

All fuel burning appliances consume oxygen during operation. It is important that you supply a source of fresh air to your unit while burning. A slightly opened window is sufficient for the purpose.

WARNING:

Never build a roaring fire in a cold stove. Always warm your stove up slowly.

Do not place anything on the stove top

Only burn wood provided, do not burn any other materials in the wood heater.

Do not remove anything from the fire box. Do not clean out the ashes.

Before opening your door to reload, open draft fully for approximately 10 to 15 seconds until fire has been re-established. This will minimize any smoke entering the room.

If the body of your unit, flue baffle or any part of the chimney starts to glow, you are over firing. Stop loading fuel and close the draft control until the glow has completely subsided.